

How to change the Default SSID?

10.10.100.254

Authentication Required

User Name:

Password:

CANCEL LOG IN

10.10.100.254

中文 | English

Fast Setting
System
STA Setting
AP Setting
Network
UART Setting
Account
Upgrade SW
Restart
Restore

Wireless AP Setting
Mode Selecting: AP
Network Mode: 11bgn
Network Name(SSID): KRV5 (serial no.)
Module MAC Address: ACCF235786E5
Select Channel: 2412MHz(channel 1)

Wireless AP Security Setting
Encryption Mode: Disable

Network Parameters Setting
IP Address(DHCP Gateway Setting): 10.10.100.254
Subnet Mask: 255.255.255.0
DHCP Server: Enable

Save

Web Ver:1.0.11

10.10.100.254

中文 | English

Wireless AP Setting
Mode Selecting: AP
Network Mode: 11bgn
Network Name(SSID): KRV5 (serial no.)
Module MAC Address: ACCF235786E5
Select Channel: 2412MHz(channel 1)

Wireless AP Security Setting
Encryption Mode: Disable

Network Parameters Setting
IP Address(DHCP Gateway Setting): 10.10.100.254
Subnet Mask: 255.255.255.0
DHCP Server: Enable

Save

Web Ver:1.0.11

1) Open the internet browser and enter the link:
"10.10.100.254"


2) Authentication Required

User Name: **admin**


Password: **admin**

3) Select "AP Setting"


4) Change Network Name (SSID)
Factory Default SSID: "KRV5(serial no.)"

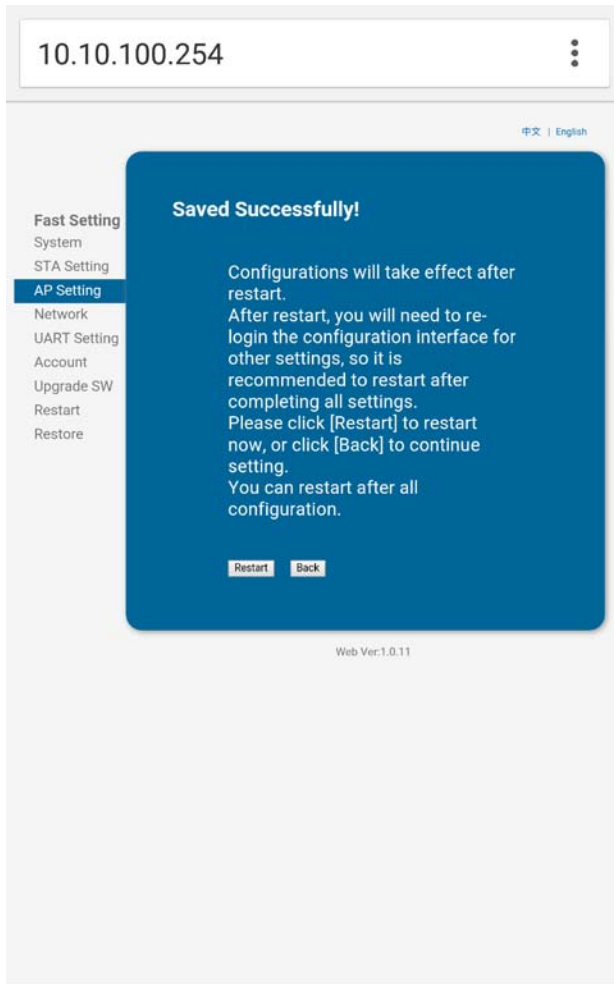

5) After changing SSID, press “Save” button

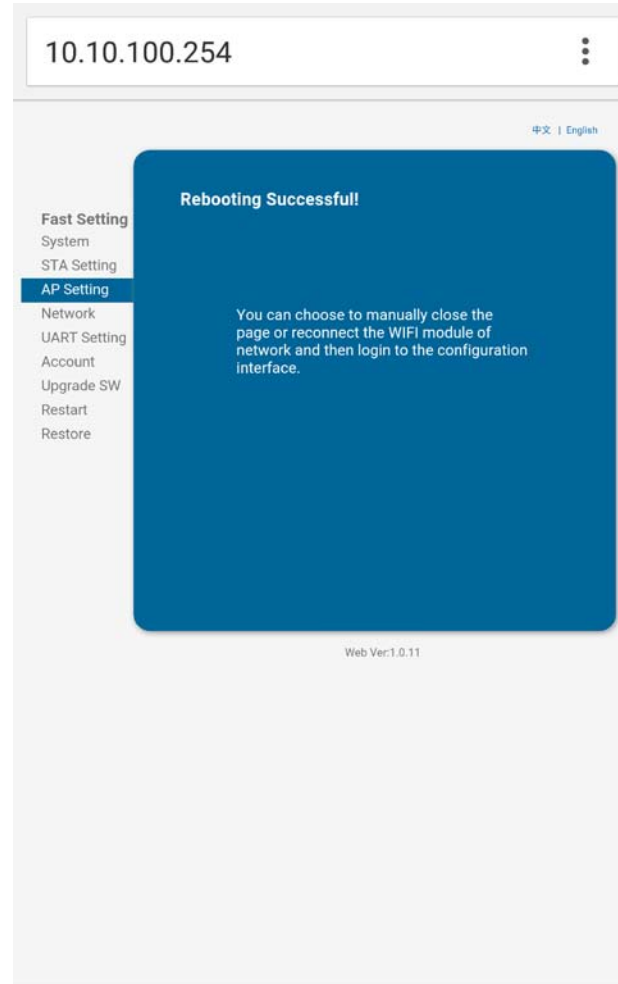

6) Press “Restart” to reboot

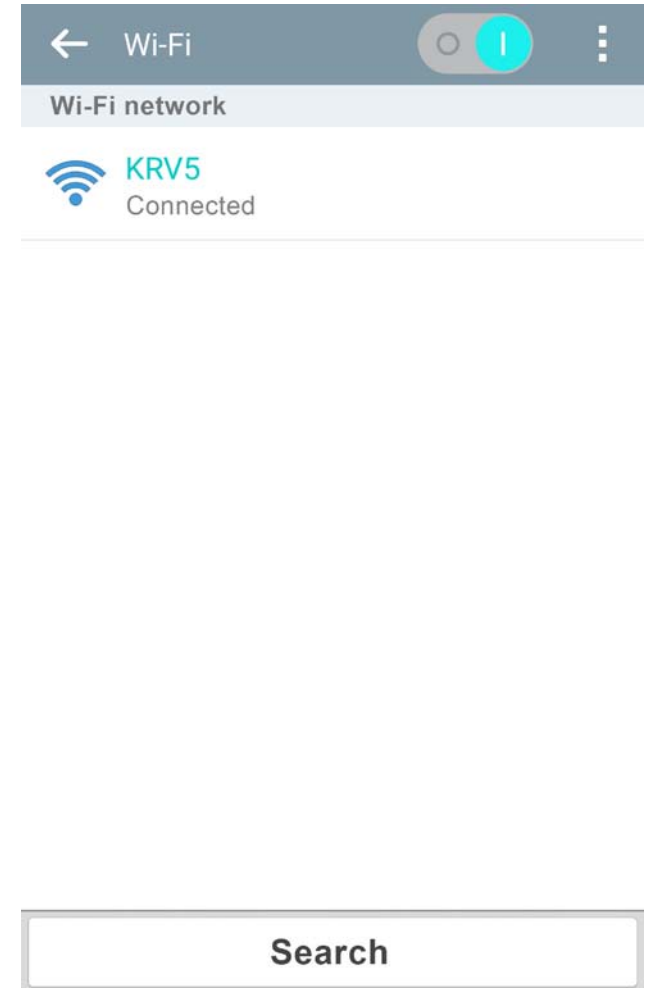

7) Search Wi-Fi network and connect